



SIM68V/ R_EVB kit_User Guide_V1.00



Document Title:	SIM68V/SIM68R EVB kit User Guide
Version:	1.00
Date:	2012-12-11
Status:	Release
Document Control ID:	SIM68V/SIM68R_EVB Kit_User Guide_V1.00

General Notes

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of SIMCom Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2012

Contents

Contents	3
Version History	5
1. Introduction.....	6
2. SIM68_EVB Overview.....	6
2.1 Detailed description of SIM68-EVB	6
2.2 USB Interface.....	7
3. Illustration of testing	8
3.1 An example of USB driver installation	8
3.2 Connecting and run	12
4. SIMCom GPS Testing Tool.....	12
4.1 Port setting	12
4.2 Click to RUN.....	13
4.3 TTFF Test	15
4.4 PMTK command input.....	16
5. Firmware update	17
6 Acronyms and abbreviation	23

Figure Index

FIGURE 1: SIM68-EVB COMPONENTS FUNCTION	6
FIGURE 2: USB INTERFACE	7
FIGURE 3: USB DRIVER INSTALLATION STEP1.....	8
FIGURE 4: USB DRIVER INSTALLITION STEP2.....	9
FIGURE 5: USB DRIVER INSTALLATION STEP3.....	9
FIGURE 6: USB DRIVER INSTALLATION STEP4.....	10
FIGURE 7: USB DRIVER INSTALLITION STEP5.....	10
FIGURE 8: USB DRIVER INSTALLITION STEP6.....	11
FIGURE 9: USB DRIVER INSTALLATION STEP7.....	11
FIGURE 10: USB DRIVER INSTALLATION STEP8.....	11
FIGURE 11: USB DRIVER INSTALLATION STEP9.....	12
FIGURE 12: TESTING TOOL INTERFACE	13
FIGURE 13: SETTING WINDOW.....	13
FIGURE 14: CLICK TO RUN	14
FIGURE 15: THE MODULE IS RUNNING	14
FIGURE 16: SETTING TTFF TESTING CONFIGURATION	15
FIGURE 17: TTFF TEST RESULT	16
FIGURE 18: COMMAND WINDOW	16
FIGURE 19: POWER FLASH MAIN UI	17
FIGURE 20: ENTER CODE.....	18
FIGURE 21: THE MAIN UI.....	18
FIGURE 22: SETTING PORT	19
FIGURE 23: SETTING BAUDRATE.....	19
FIGURE 24: DETAILED SETTINGS	20
FIGURE 25: DA FILE IN DOWNLOADING PROCEEDING.....	21
FIGURE 26: ROM FILE IN DOWNLOADING PROCEEDING	21
FIGURE 27: FIRMWARE UPDATE SUCCEEDS	22

Table Index

TABLE 1: USB PIN DEFINITION.....	7
TABLE 2: ACRONYMS AND ABBREVIATIONS	23

Version History

Data	Version	Description of change	Author
2012-12-11	1.00	Origin	Ma Honggang

1. Introduction

This document introduces the usage of SIM68V/R EVB-Kit, User can get useful information about the SIM68 EVB quickly through this document.

This document is subject to change without notice at any time.

2. SIM68_EVB Overview

2.1 Detailed description of SIM68-EVB

The chapter introduces the functions of each component.

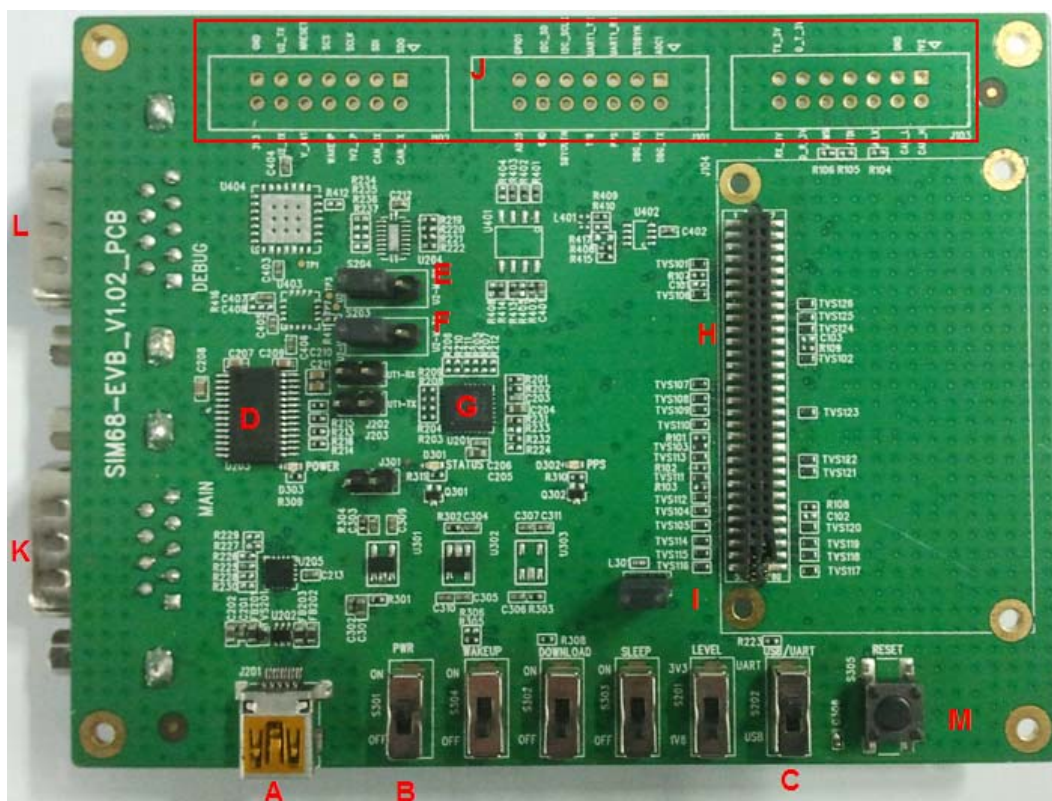


Figure 1: SIM68-EVB components function

- A: USB interface, support USB communication with SIM68V/R, and also power the SIM68-EVB.
- B: S301, Power switch, push up to power the EVB and module, push down to power off.
- C: S202, NMEA output select. Push up to choose USB port. Push down to close.
- D: UART to RS232 transceiver
- E, F: Select for receiving NMEA data from A or K. Jump the left and middle needle is select A port, jump the middle and right needle is select K port.

SIM68V/R EVB kit User Guide

G: UART to USB transceiver.

H: 60 PIN connector for the SIM68V/R-TE

I: J302, the jumper of VANT which is the source of active of antenna.(SIM68R doesn't need)

J: Test point area. (Customer should contact SIMCom if the test point is needed).

K: Main UART port for the NMEA output.

L: Debug UART port, reserved.

M: Reset button (only for SIM68R).

2.2 USB Interface

There is one Mini-USB interface on SIM68-EVB, which is transferred to UART by a USB to UART chip CP2103 on the EVB board. User need to install CP2103 driver in their PC first, then connect the EVB board to the PC by a USB cable, and push S301 up to power the SIM68-EVB.

Please download the latest CP2103 driver according to the PC's OS from the following link:
<http://www.silabs.com/products/mcu/pages/usbtouartbridgevcpdrivers.aspx> or contact SIMCom for support.

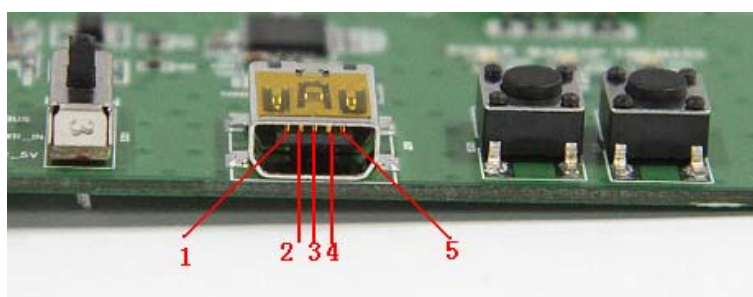


Figure 2: USB interface

Table 1: USB pin definition

PIN Number	Signal	I/O	Description
1	VBUS	I	5V input
2	D-	I/O	Data minus
3	D+	I/O	Data plus
4,5	GND		GND

3. Illustration of testing

User need to install CP2103 driver in their PC first before using SIM68-EVB.

Please download the latest CP2103 driver according to the PC's OS from the following link:

<http://www.silabs.com/products/mcu/pages/usbtouartbridgevcpdrivers.aspx> or contact SIMCom for support.

3.1 An example of USB driver installation

Step1.exectue Setup file (CP210x_VCP_Win_XP_S2K3_Vista_7)

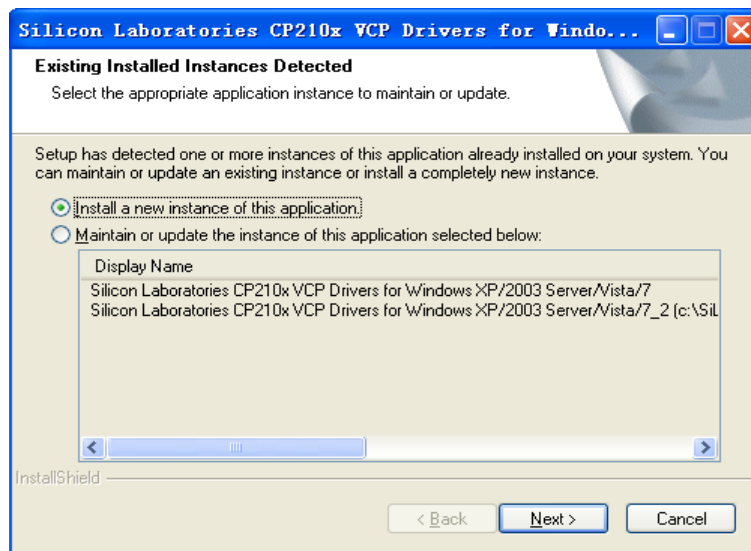


Figure 3: USB driver installation step1

Step2.select “next” button then “next”

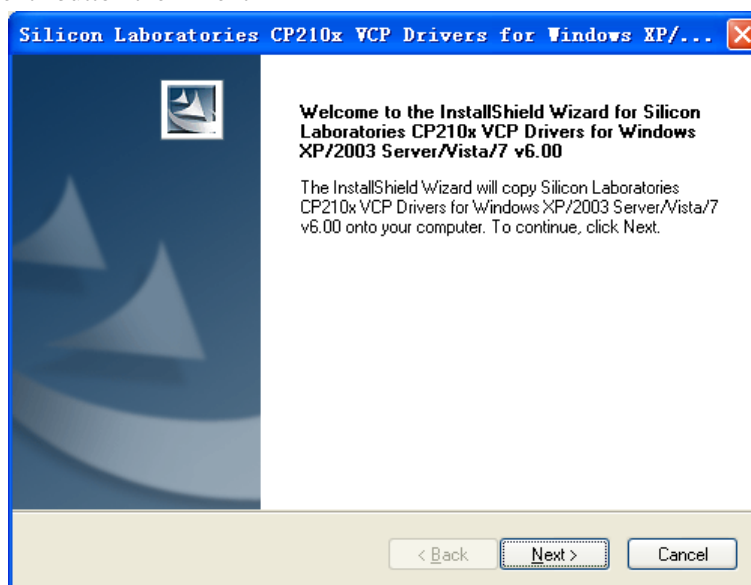


Figure 4: USB driver installation step2

Step3. Accept the license agreement and “next”

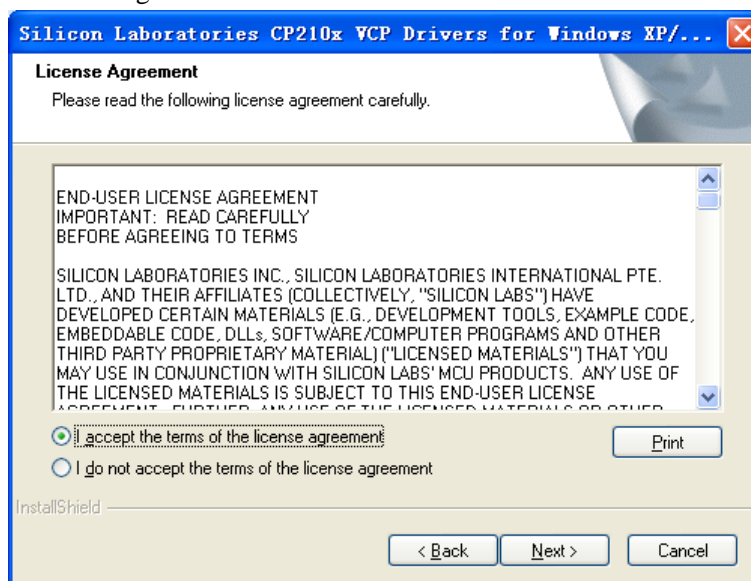


Figure 5: USB driver installation step3

Step4. Choose Driver Destination Location

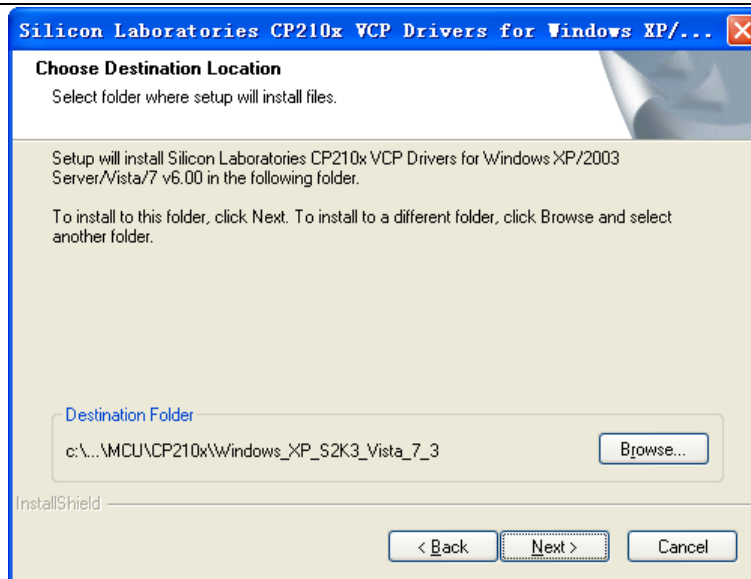


Figure 6: USB driver installation step4

Step5. Confirm Installation, select “Install” button

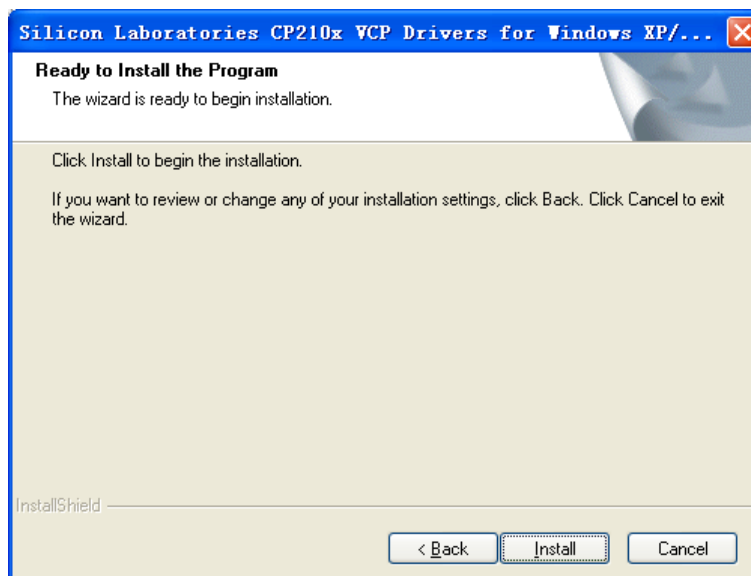
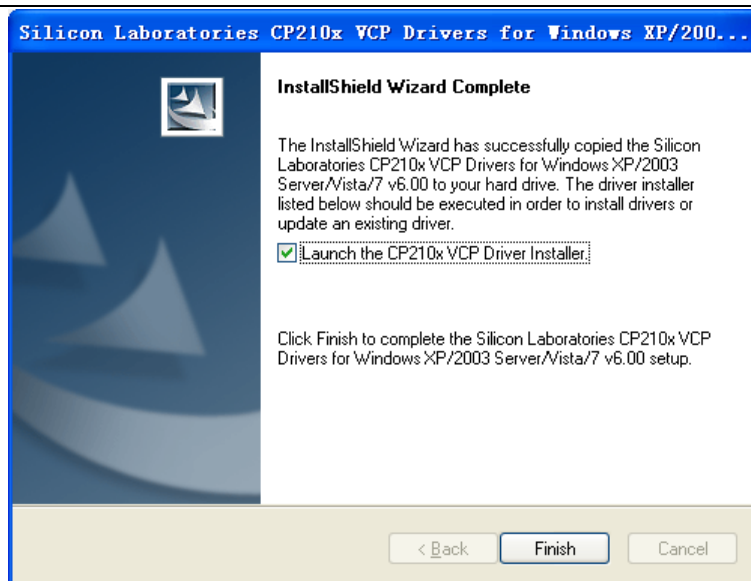
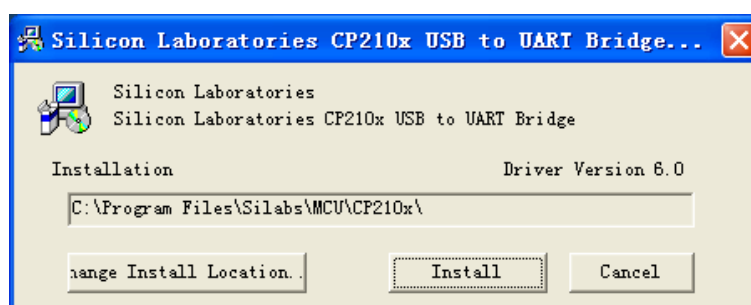


Figure 7: USB driver installation step5

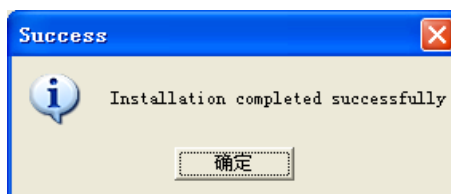
Step6. Launch the CP210x VCP Driver Installer

**Figure 8: USB driver installation step6**

Step7. Select “Install” button

**Figure 9: USB driver installation step7**

Step8. Installation completed.

**Figure 10: USB driver installation step8**

Step9. After completing CP2103 driver installation, connect SIM68-EVB to PC by the bus cable, and set S301 switch to VBUS, then “Silicon Labs CP210x USB to UART Bridge (COMX)” will appear in the device manager:

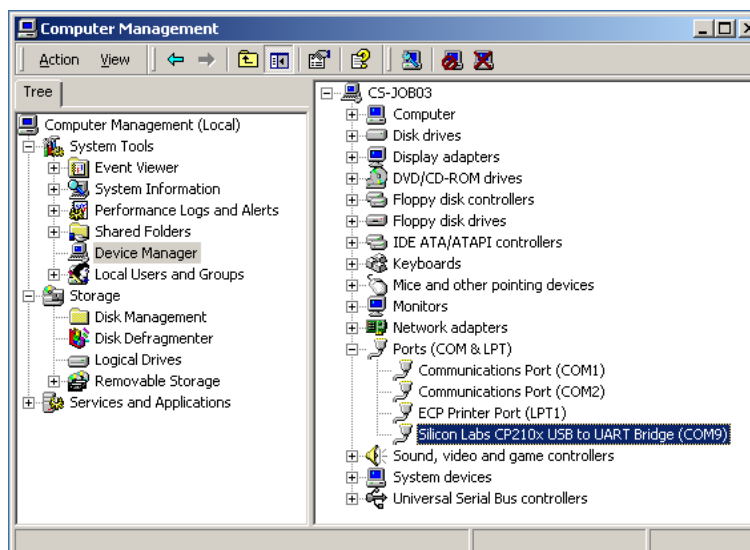


Figure 11: USB driver installation step9

3.2 Connecting and run

To test the SIM68V/R module, the following operations are needed:

1. Install CP2103 driver.
2. Install GPS test tool.
3. Connect the active antenna to the RF connector, and insert SIM68V/R-TE to module connector.
4. Connect the SIM68-EVB to PC with USB cable.
5. Push up the power switch of S301.
6. Push up the switch of S202 to select UART signal.
7. Open GPS test tool to test.

4. SIMCom GPS Testing Tool

This chapter gives a detailed introduction of testing tool “SIMCom GPS Demo”. Please contact SIMCom to get the newest version of GPS Testing tool.

4.1 Port setting

In the testing tool interface, open the “setting” window according to the following path:
Module-->Properties.

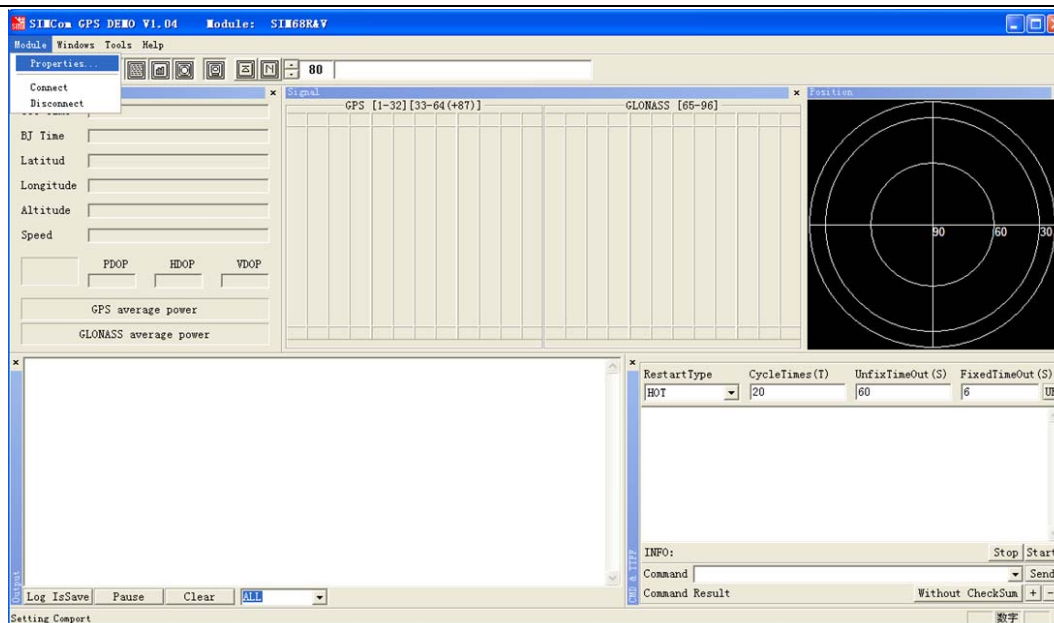


Figure 12: Testing tool interface

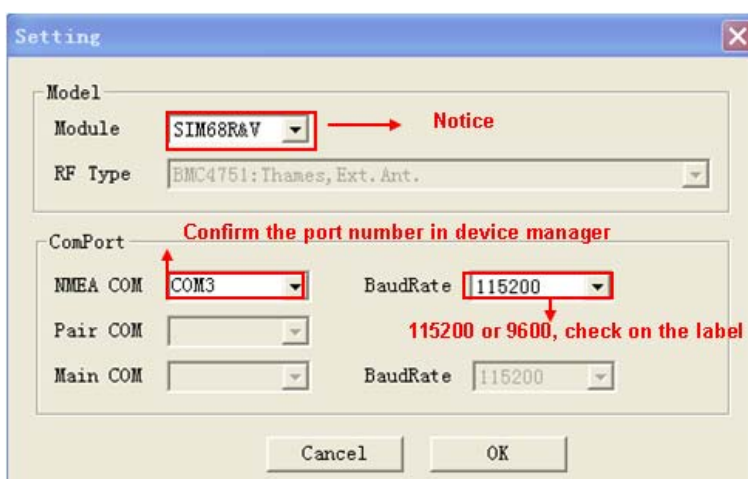


Figure 13: Setting Window

In the “NMEA COM” drop down list choose the corresponding com mentioned before. The baudrate is 115200 or 9600. Then click OK.

4.2 Click to RUN

Click the button “Run Comport” to run the module.

4.3 TTFF Test

The test configure should be set before each TTFF test. It is in the right bottom of the tool interface.

The restart type (hot, warm or cold) could be selected in the drop down list of “Restart type”. Fill in the next three blank (“Cycletimes” for the testing times, “Unfixtimeout” for the max time limit of each test and “Fixedtimeout” for the time waiting before next TTFF test) and press the start button.

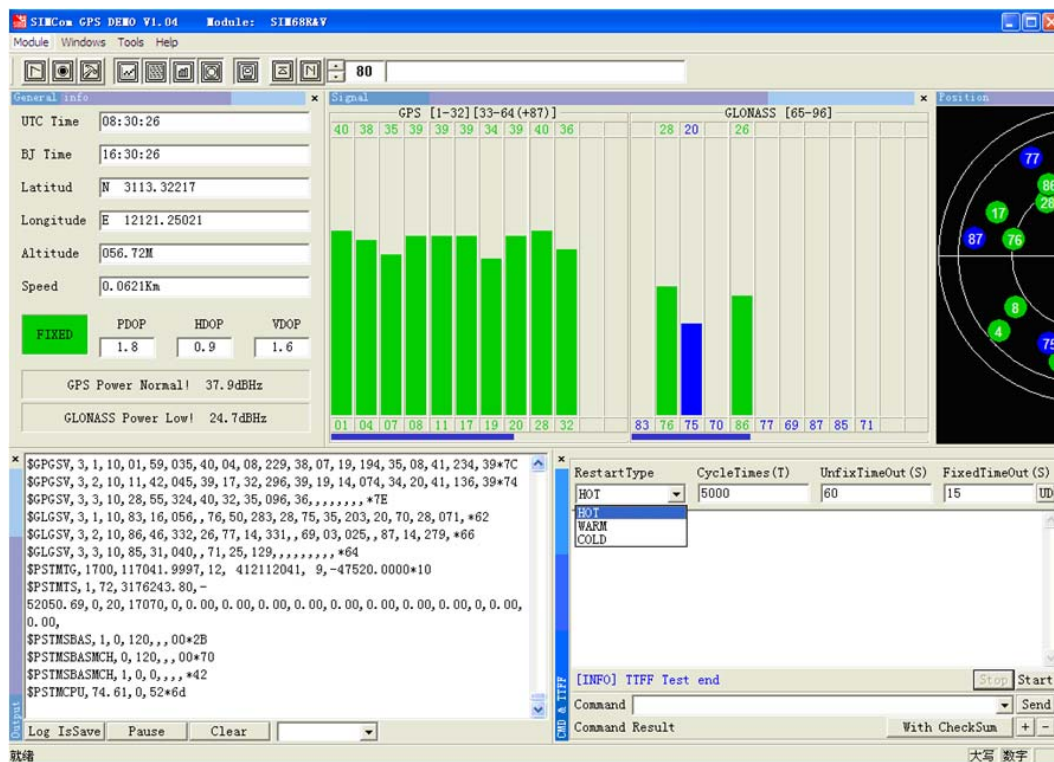


Figure 16: Setting TTFF testing configuration

The result of each TTFF will be shown in the window, each TTFF shorter than the “UnfixTimeOut” is labeled as Pass.

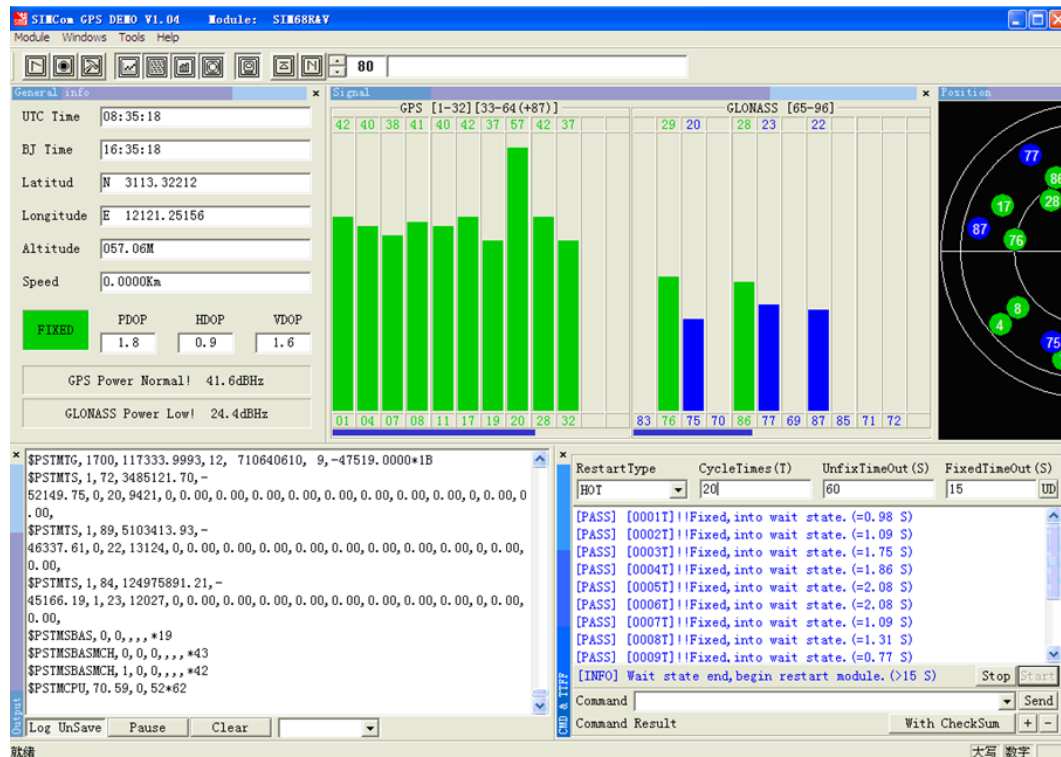


Figure 17: TTF Test Result

4.4 PMTK command input

SIM68V/R module supports some kinds of modes that must be enabled by PMTK commands as mentioned in the HD document, GPS Demo provides an access to send PMTK command to module, as the following figure shows, customer can refer to *SIM28@SIM68R@SIM68V_NMEA Messages Specification_V1.01* to get the detailed information of PMTK list that SIM68V/R supported.

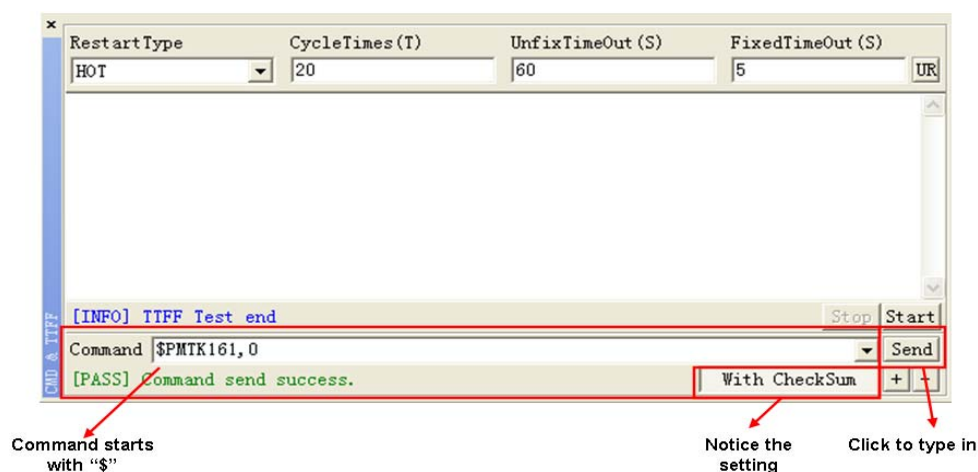


Figure 18: Command window

5. Firmware update

To update the SIM68V/R module software, the following operations are needed:

1. Install the tool of “Power Flash”.
2. Connect the SIM68-EVB to PC with USB cable.
3. Setting the jumper “N” and “O” as figure 1 shows.
4. Switch on S202 to select UART signal.
5. Switch on the power switch S301.

Step1. Customer should open the tool Power Flash, the following figure shows the interface of power flash.

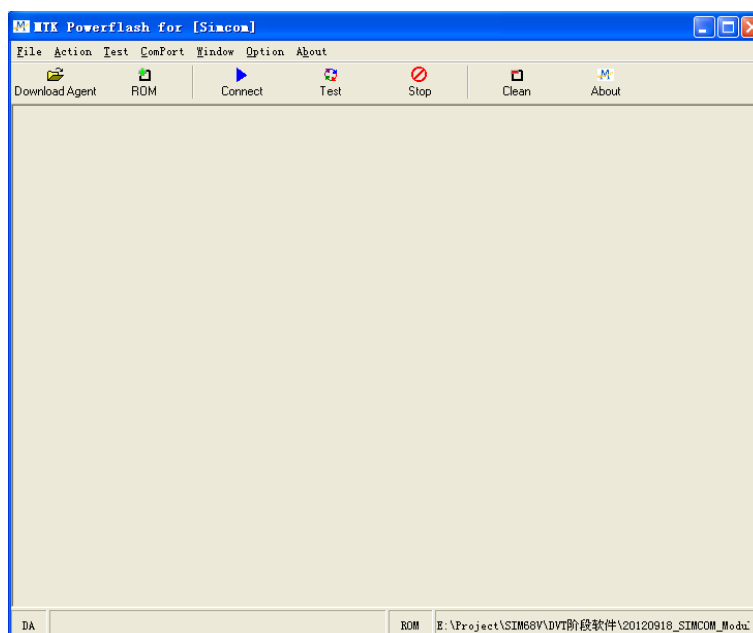


Figure 19: power flash main UI

Step 2. Using the combination key “CTRL+ALT+T” to set the port, the password is “123456”.

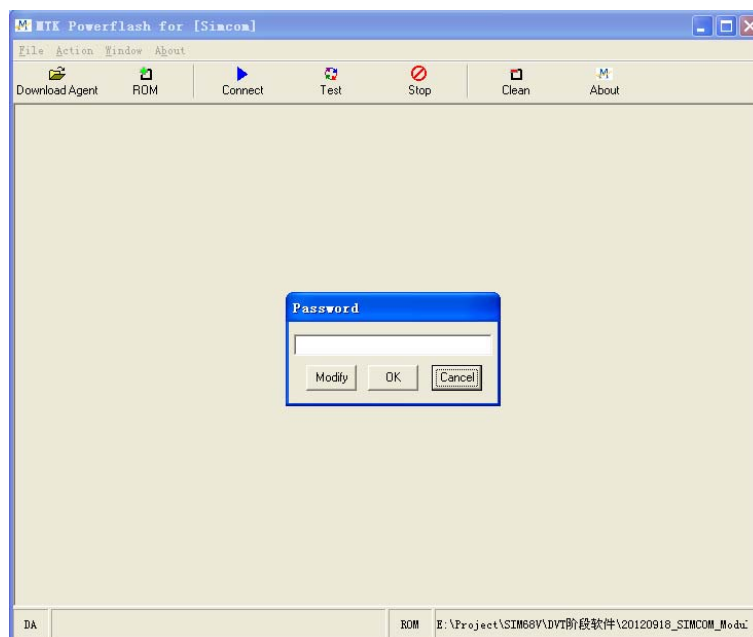


Figure 20: enter code

Step 3. The window UI has changed.

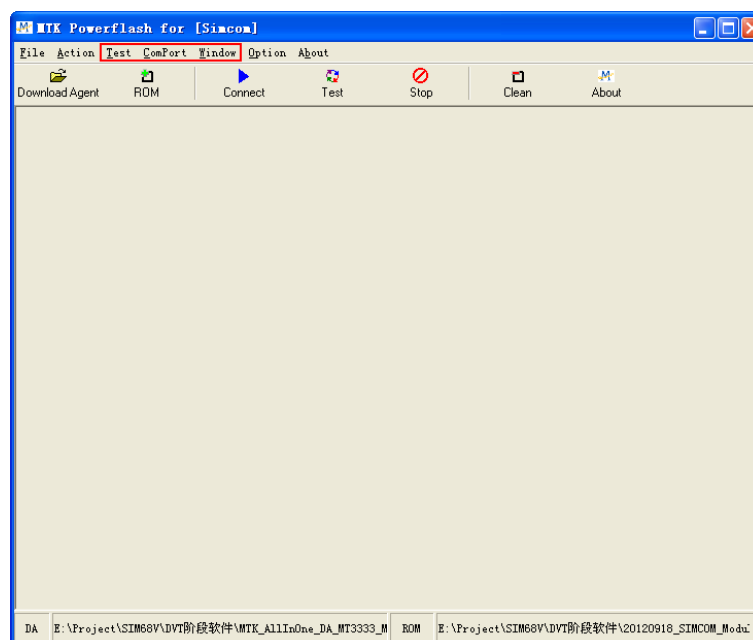


Figure 21: the main UI

Step 4. Setting the number of comport as following figure shows, here is the comport 3.

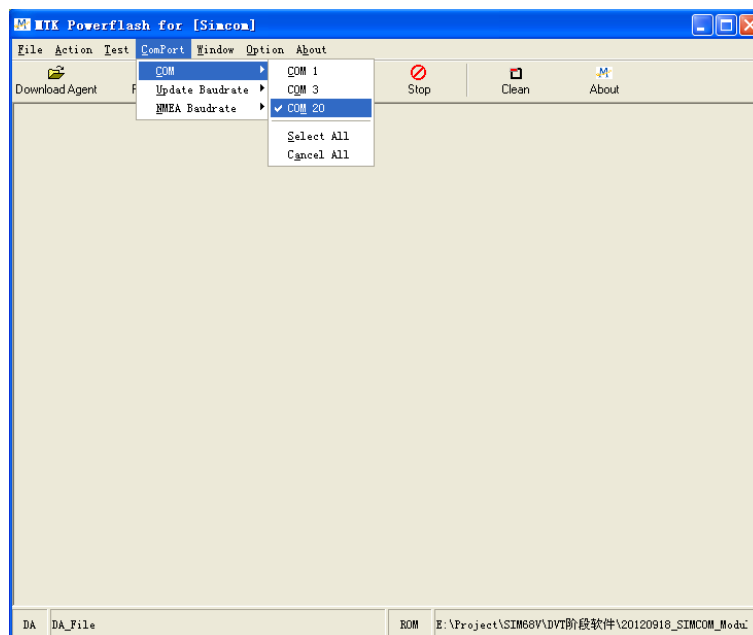


Figure 22: setting port

Step 5. Setting the update baudrate as 460800.

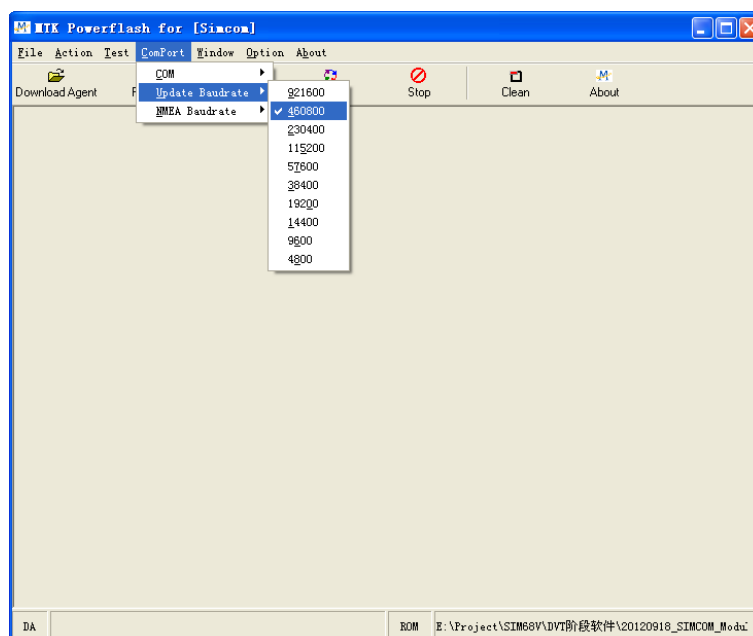


Figure 23: setting baudrate

Step 6. Load files to the power flash.

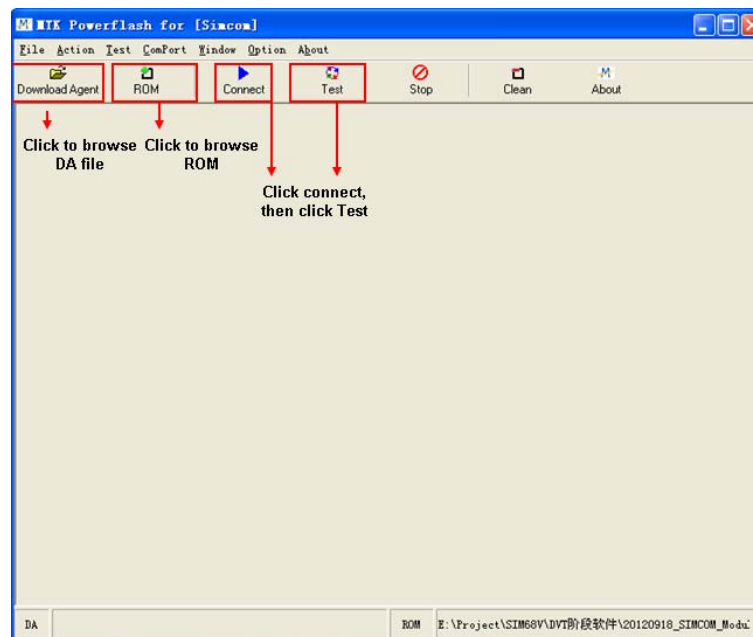


Figure 24: detailed settings

Step 7.The DA file is in downloading proceeding.

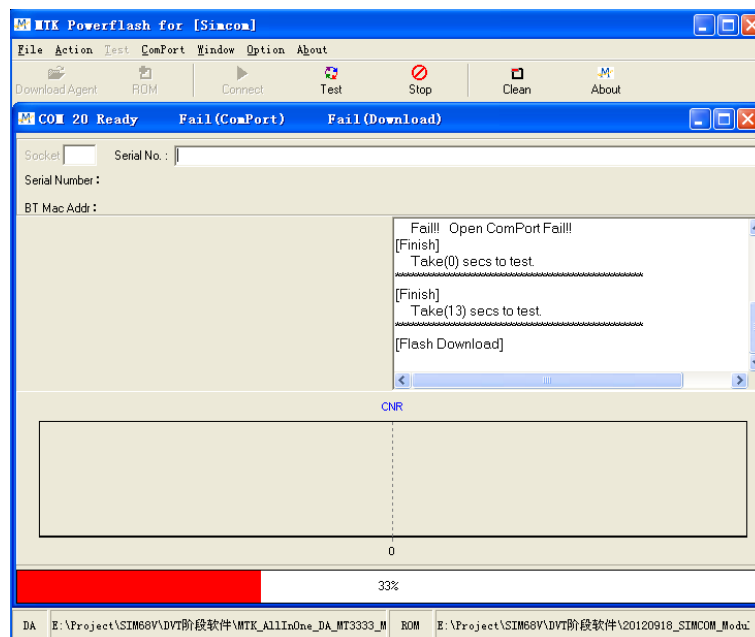


Figure 25: DA file in downloading proceeding

Step 8.The ROM is in downloading proceeding.

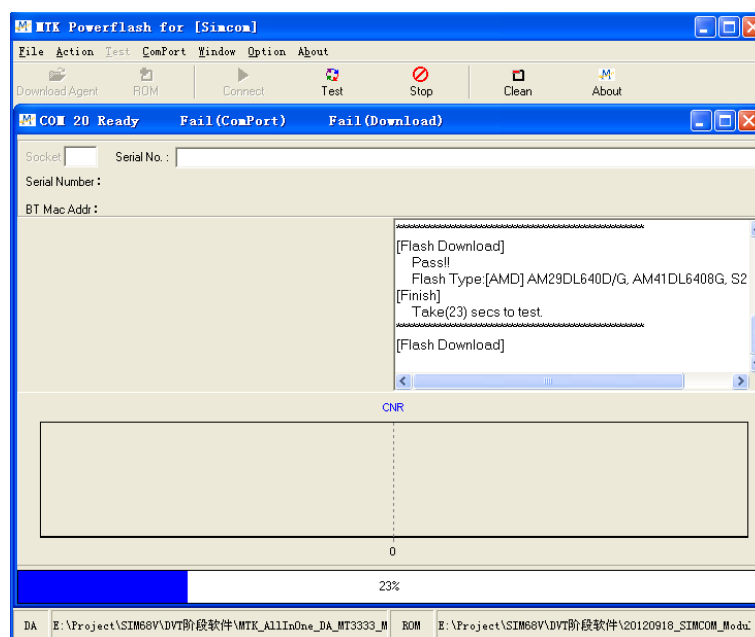


Figure 26: ROM file in downloading proceeding

Step 9. Firmware update succeeds.

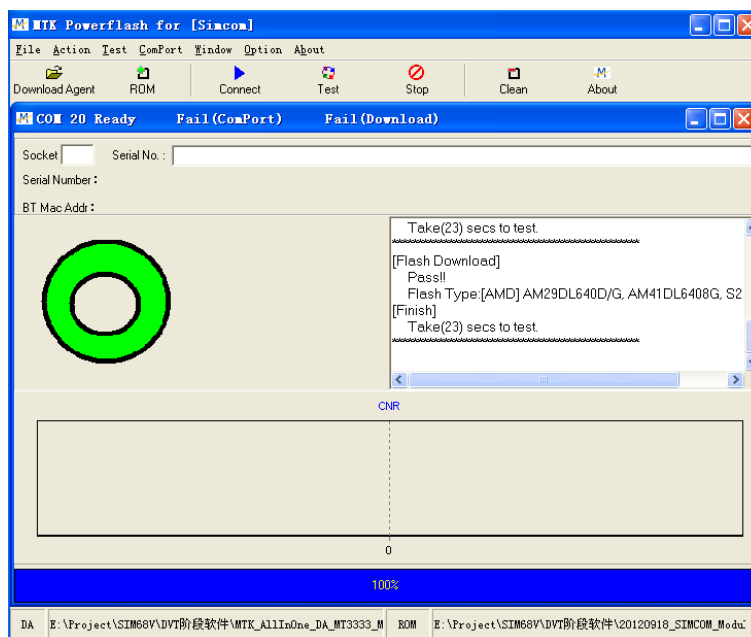


Figure 27: Firmware update succeeds

6 Acronyms and abbreviation

Table 2: Acronyms and abbreviations

Abbreviation	Description
DC	Direct Current
I/O	Input/Output
LED	Light Emitting Diode
SPI	Serial Peripheral Interface
USB	Universal Serial Bus
UART	Universal Asynchronous Receiver & Transmitter

Contact us:

Shanghai SIMCom Wireless Solutions Ltd

Add: SIM Technology Building A,

No. 633, Jinzhong Road, Shanghai, P. R. China 200335

Tel: +86 21 3252 3300

Fax: +86 21 3252 3020

URL: www.sim.com